




TRA SNOW & SUN

ROOF ACCESSORY SYSTEMS

VERSA FLASH

APPLICATION STEPS

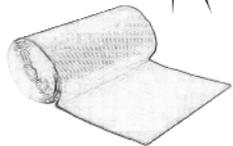


General Information

Substructure must be clean and dry.


STEP 1: CLEAN SURFACE

1. Clean surface to remove dust so wall and tile are clean and dry.

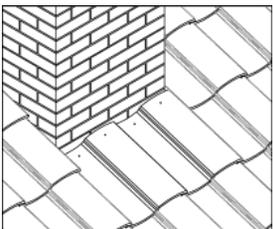


STEP 2: CUTTING AND BENDING

1. Cut VersaFlash™ 3" inches longer than chimney or head wall width.
2. Bend in half vertically with metal sides toward each other. Then firmly press to chimney or head wall. The VersaFlash™ bending line should contact the point of the roof on the folded side of the chimney wall.

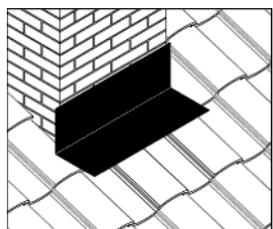


STEP 3: ADHERING TO TILE

1. Remove protective sheet from lower adhesive tape starting with the center overlapping release backing and form it to tile.

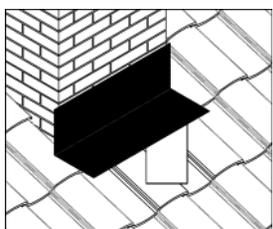


STEP 4: ROLLING

1. Roll the VersaFlash™ onto the chimney or head wall removing the corrugations of the aluminum. We suggest using a Silicon Roller.

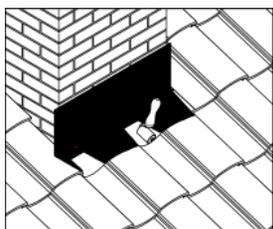

STEP 5: ADHERING TO CHIMNEY

1. Bend top half down from the chimney.
2. Remove protective sheet from the upper adhesive tape. If butyl sticks to release use thumb to peel film release backing and hold butyl in place while peeling.
3. Press VersaFlash™ to the chimney wall.

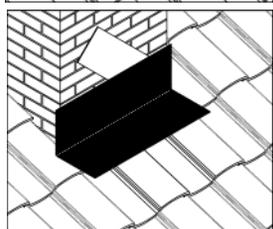


TRA SNOW & SUN

ROOF ACCESSORY SYSTEMS

VERSA FLASH

APPLICATION STEPS

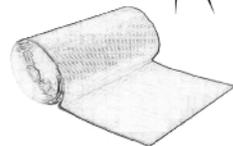


General Information

Substructure must be clean and dry.


STEP 1: CLEAN SURFACE

1. Clean surface to remove dust so wall and tile are clean and dry.

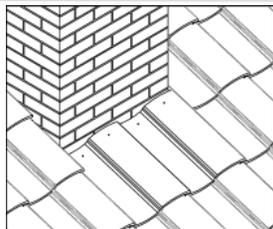


STEP 2: CUTTING AND BENDING

1. Cut VersaFlash™ 3" inches longer than chimney or head wall width.
2. Bend in half vertically with metal sides toward each other. Then firmly press to chimney or head wall. The VersaFlash™ bending line should contact the point of the roof on the folded side of the chimney wall.

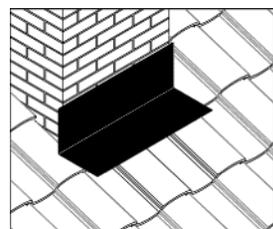


STEP 3: ADHERING TO TILE

1. Remove protective sheet from lower adhesive tape starting with the center overlapping release backing and form it to tile.

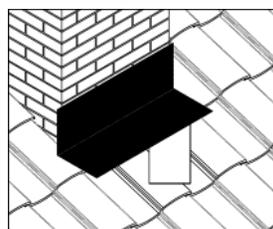


STEP 4: ROLLING

1. Roll the VersaFlash™ onto the chimney or head wall removing the corrugations of the aluminum. We suggest using a Silicon Roller.

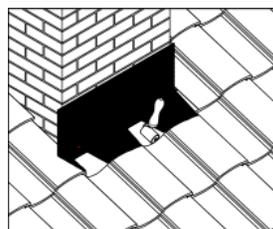

STEP 5: ADHERING TO CHIMNEY

1. Bend top half down from the chimney.
2. Remove protective sheet from the upper adhesive tape. If butyl sticks to release use thumb to peel film release backing and hold butyl in place while peeling.
3. Press VersaFlash™ to the chimney wall.

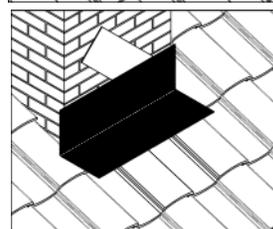

CAUTION! The perforations and edge of VersaFlash™ are extremely sharp. Please wear gloves to eliminate the possibility of cuts and scrapes.

CAUTION! The perforations and edge of VersaFlash™ are extremely sharp. Please wear gloves to eliminate the possibility of cuts and scrapes.



STEP 6: ROLLING

1. Roll the VersaFlash™ onto the chimney or head wall removing the corrugations of the aluminum. We suggest using a Silicon Roller.

STEP 7: ADHERING TO THE SIDEWALL

1. Determine the length of the side strip by length of the sidewall plus the width of the VersaFlash™ on the tile surface both above and below the chimney.
2. Bend in half vertically.
3. Remove protective sheet and press VersaFlash™ to wall or chimney then to tile. Start at bottom and move upwards.
4. Cut product long enough to allow 1 inch to be folded over front flashing. Fold extension of the side-lap over front flap and press standing seam against chimney wall.

STEP 8: UPHILL SIDE OF CHIMNEY

1. Repeat Steps 2-8 for uphill side of the chimney
- NOTE: The width of the material purchased is dependent on the width of the fireplace. (The wider the fireplace the wider the width needed of the VersaFlash)

STEP 9: COUNTER FLASHING

1. Install VersaFlash™ counter flashing over VersaFlash™ and secure to wall or chimney with appropriate fastener.

STEP 10: SEALING/CAULKING

1. Seal upper seam with an exterior sealing compound.

STEP 6: ROLLING

1. Roll the VersaFlash™ onto the chimney or head wall removing the corrugations of the aluminum. We suggest using a Silicon Roller.

STEP 7: ADHERING TO THE SIDEWALL

1. Determine the length of the side strip by length of the sidewall plus the width of the VersaFlash™ on the tile surface both above and below the chimney.
2. Bend in half vertically.
3. Remove protective sheet and press VersaFlash™ to wall or chimney then to tile. Start at bottom and move upwards.
4. Cut product long enough to allow 1 inch to be folded over front flashing. Fold extension of the side-lap over front flap and press standing seam against chimney wall.

STEP 8: UPHILL SIDE OF CHIMNEY

1. Repeat Steps 2-8 for uphill side of the chimney
- NOTE: The width of the material purchased is dependent on the width of the fireplace. (The wider the fireplace the wider the width needed of the VersaFlash)

STEP 9: COUNTER FLASHING

1. Install VersaFlash™ counter flashing over VersaFlash™ and secure to wall or chimney with appropriate fastener.

STEP 10: SEALING/CAULKING

1. Seal upper seam with an exterior sealing compound.